

Setting up your cable



The coax line will be attached to the floor or wall outlet. Screw the end not connected to the wall/floor into the back of your tv.



Using the **TVs** remote control, follow these general steps:

1. Press the "Power" button to turn on the TV
2. Press the "Menu" Button
3. Select "Set-Up" or "Channel"
4. Select "Antenna" then "Cable"
5. Select "Auto Program/Auto Tune" then "OK"

Exact details on how to auto program or auto tune digital TVs vary from manufacturer to manufacturer and from model to model. These instructions are generalizations that are meant to describe the way many TVs accomplish this feature. For best results, refer to the owner- manual for the specific TV you are working with or you may Google the brand and model number for instructions. Most TVs will take between 20-45 minutes to complete this function.

On most HDTVs, HD channels will be at a .2 position, for example, 3.2 or 5.2. After channel 12.2 all channels will generally end in .1

Setting up your DTA Cable Box



The coax line will be attached to the floor or wall outlet. Screw the end not connected to the wall/floor into the back of the DTA where it says "CABLE IN".



Once the coax line is attached to the "Cable In" on the back of DTA, then connect the HDMI cord to the HDMI port on the back of the DTA. One end of the HDMI cord will attach to the back of the DTA and the other end to an HDMI port on your TV.



HDMI cord

